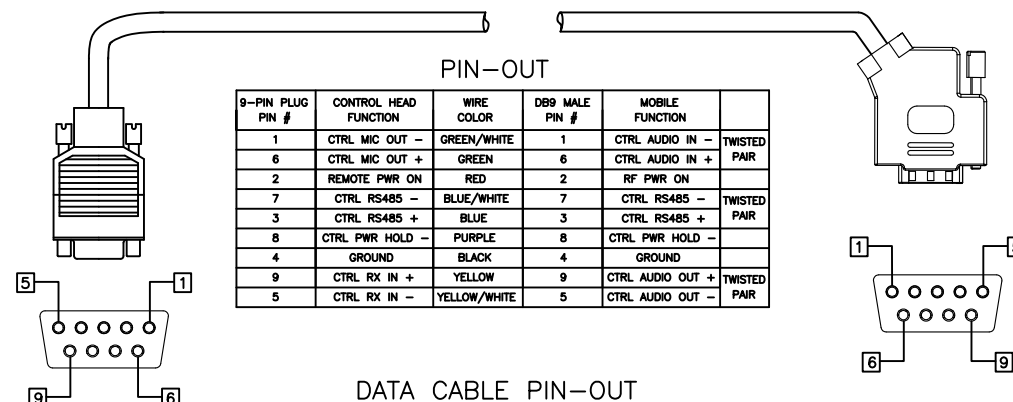



- CUT TO CENTER OF RED WIRE (SHOWN ON FIG. 1) THEN STRIP ENDS TO 1/4" AS SHOWN ON FIG. 2.
- INSTALL ABOVE FUSE HOLDER AS CLOSE TO VEHICLE BATTERY AS POSSIBLE.

INSTALLATION KIT – PARTS INCLUDED

ITEM	PART NUMBER	DESCRIPTION	REMARKS
1	1400-31030-400	BRACKET, MOUNTING, REMOTE-MOUNT, KNG-M	—
2	1411-31030-500	RATCHET, MOUNTING, REMOTE-HEAD, KNG-M	QTY 2
3	2837-10000-023	SELF TAPPING SCREW, #10	QTY 4
4	2100-30937-601	FUSE HOLDER, ATC w/14GA LEAD	—
5	2107-30931-503	TERMINAL, BARREL-CRIMP, 16-14GA	QTY 2
6	5106-30937-705	FUSE, BLADE, 7 1/2A, 32V, FAST ACTING	—
7	2123-31032-800	THUMBSCREW, WINGNUT, REMOTE-HEAD, KNG-M	QTY 2
8	7005-31035-300	INSTALLATION INSTRUCTIONS, KNG-M REMOTE	THIS DWG
9	6006-31034-200	CABLE ASSY, POWER CORD, KNG-M RCH	—
10	6006-31026-300/ 7001-31026-300	CABLE ASSY, ACC, 25_PIN, KNG-M	—
11	7001-31046-500	INSTRUCTION BOOKLET, KNG-M, INSTALLATION	—
12	KAA0045	DUST COVER, MIC, CONNECTOR, KNG-M	NOT SHOW

* IMPORTANT— READ BEFORE OPERATING

1. THE MICROPHONE HANG-UP CLIP DOES NOT NEED TO BE GROUNDED FOR PROPER CODE GUARD OPERATION. THE HANG-UP CLIP AND COLLAR ALLOW THE DEVICE TO BE GROUNDED THROUGH THE MICROPHONE CABLE.
2. RELAYS CONNECTED TO OPT OUTPUTS 3, 4 OR 5 MUST BE POWERED FROM FUSED_SWA+ THAT IS SUPPLIED AT PIN 20.